

[FAQ]

In a matrix in control center, what conditions we need in order to use camera configure?

Release Date: 10/30/2015

Applied to:

Control Center v3.3

Question:

What conditions we need in order to use camera configure in the matrix view?

Answer:

In order to use camera configure in the matrix view, it is required to select cameras from GV-NVR. Camera configure will not be available in the matrix view if camera are selected from other hosts such Recording Server, IP Camera, Compact DVR, SNVR and so on.

For any question on the information provided, please feel free to submit your question to our support window at support@geovision.com.tw