

## [FAQ]

### How to Tell the Memory Size in GV-IP Camera?

Article ID: GV3-15-05-29-j

Release Date: 05/29/2015

#### Applied to

GV-IPCAM H.264 Series

#### Question


How to tell the memory size in my GV-IP Camera?

#### Answer

The GV-IPCAM H.264 Series has two kinds of capacities in flash memory: **32 MB** and **128 MB**. You can look up the capacity of flash memory through the camera's Web interface or GV-IP Device Utility.


#### Web Interface

Click **Management** and click **Tools**. You will see "128 MB" noted after the firmware version; otherwise it is 32 MB.

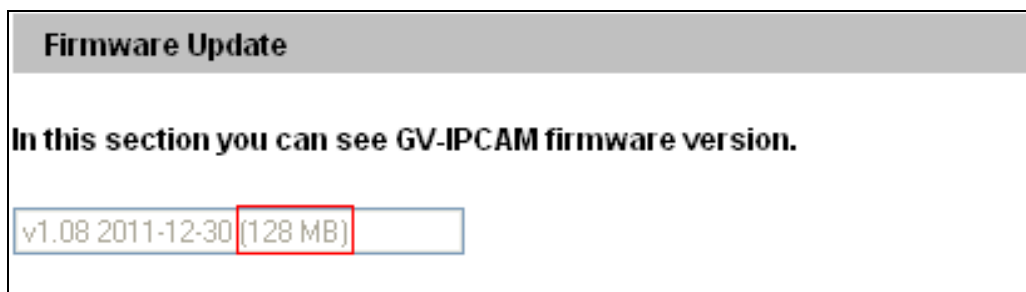

## GV IP Device Utility

The "128 M" will appear under the NOTE column; otherwise it is 32 MB.

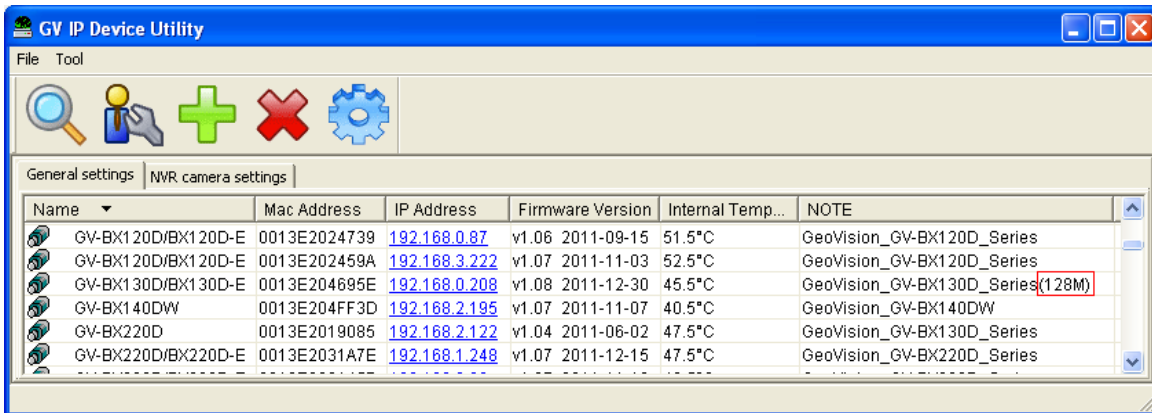

The screenshot shows the 'GV IP Device Utility' application window. It features a menu bar with 'File' and 'Tool', a toolbar with icons for search, add, delete, and settings, and two tabs: 'General settings' and 'NVR camera settings'. The main area contains a table with the following columns: Name, Mac Address, IP Address, Firmware Version, Internal Temp..., and NOTE. The table lists several camera models, with the 'NOTE' column for 'GeoVision\_GV-BX130D\_Series' containing '(128M)'.

Name	Mac Address	IP Address	Firmware Version	Internal Temp...	NOTE
GV-BX120D/BX120D-E	0013E2024739	<a href="#">192.168.0.87</a>	v1.06 2011-09-15	51.5°C	GeoVision_GV-BX120D_Series
GV-BX120D/BX120D-E	0013E202459A	<a href="#">192.168.3.222</a>	v1.07 2011-11-03	52.5°C	GeoVision_GV-BX120D_Series
GV-BX130D/BX130D-E	0013E204695E	<a href="#">192.168.0.208</a>	v1.08 2011-12-30	45.5°C	GeoVision_GV-BX130D_Series(128M)
GV-BX140DW	0013E204FF3D	<a href="#">192.168.2.195</a>	v1.07 2011-11-07	40.5°C	GeoVision_GV-BX140DW
GV-BX220D	0013E2019085	<a href="#">192.168.2.122</a>	v1.04 2011-06-02	47.5°C	GeoVision_GV-BX130D_Series
GV-BX220D/BX220D-E	0013E2031A7E	<a href="#">192.168.1.248</a>	v1.07 2011-12-15	47.5°C	GeoVision_GV-BX220D_Series