

[FAQ]

Can I turn off the Status LED on GeoVision Box Camera?

Article ID: GV12-12-03-v

Release Date: 12/03/2012

Applied to


GV-Box Camera Series

Question

Can I turn off the Status LED on the front of the GeoVision Box Camera?

Answer

1. Log into the Web interface of the camera using the Administrator account.
2. Click the **Video and Motion** and select **Video Settings**.
3. Select **Streaming 1**, find **LED Control** and select **Disable** if you do not wish to use the Status LED.

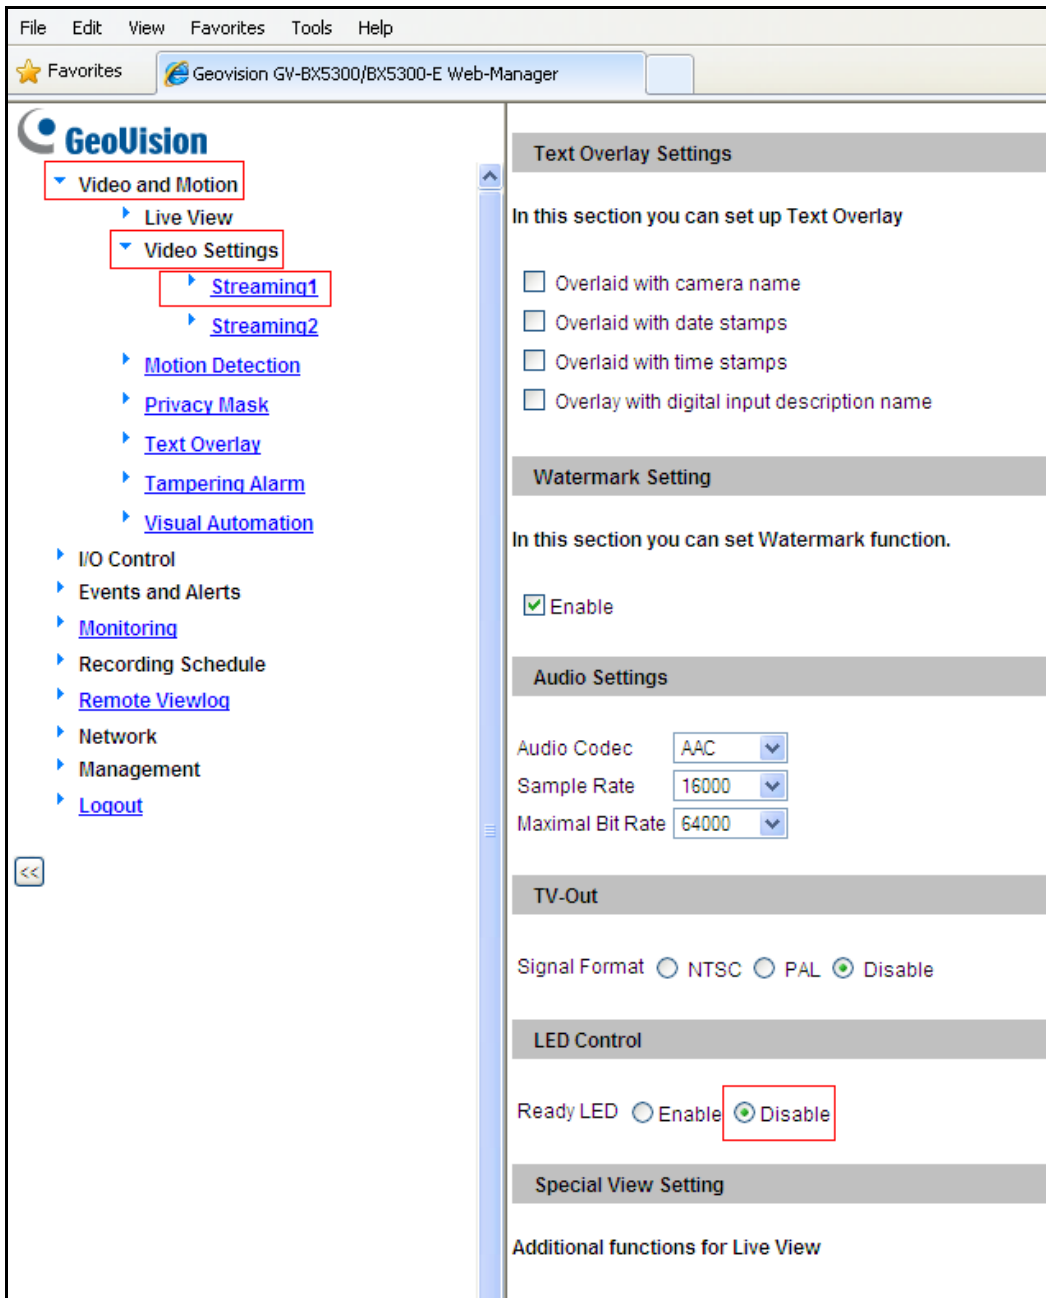

The screenshot shows the GeoVision web manager interface. The browser address bar displays "GeoVision GV-BX5300/BX5300-E Web-Manager". The left sidebar contains a navigation menu with the following items: "Video and Motion" (expanded), "Live View", "Video Settings" (expanded), "Streaming1" (selected), "Streaming2", "Motion Detection", "Privacy Mask", "Text Overlay", "Tampering Alarm", "Visual Automation", "I/O Control", "Events and Alerts", "Monitoring", "Recording Schedule", "Remote Viewlog", "Network", "Management", and "Logout".

The main content area is titled "Text Overlay Settings" and includes the following sections:

- Text Overlay Settings**
In this section you can set up Text Overlay
 - Overlaid with camera name
 - Overlaid with date stamps
 - Overlaid with time stamps
 - Overlay with digital input description name
- Watermark Setting**
In this section you can set Watermark function.
 - Enable
- Audio Settings**
 - Audio Codec: AAC
 - Sample Rate: 16000
 - Maximal Bit Rate: 64000
- TV-Out**
Signal Format: NTSC PAL Disable
- LED Control**
Ready LED: Enable Disable
- Special View Setting**
Additional functions for Live View