

## [FAQ]

# How do I export my configuration from one GV-IP device to another?

**Article ID: GV15-02-07-k**

**Release Date: 02/07/2013**

### Applied to

GV-Video Server (GV-VS04H, GV-VS11, GV-VS12, and GV-VS14)

GV-Compact DVR V3 Series

GV-IPCAM H.264 Series


### Question

How do I export my configuration from one GV-IP device to another?


### Answer

1. Run the **IP Device Utility** from the Software DVD. Locate the desired GV-IP Device.
2. Double-click the desired device in the list.

3. Click the **Export Settings** button. This box appears.

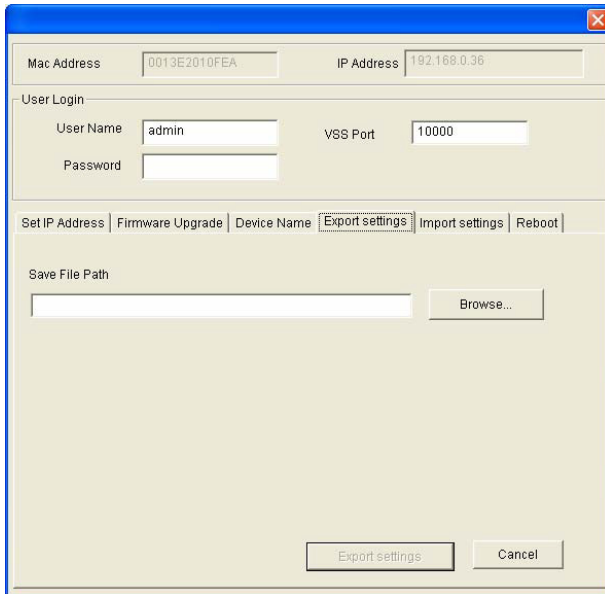

4. Click the **Browse** button to assign a file path.
5. Type the **Password**, and click **Export Settings** to save the backup file.
6. Go back to the list of the **IP Device Utility**.
7. Double-click the device where you want to move the IP configuration to.
8. Click the **Import Settings** tab. This dialog box appears.

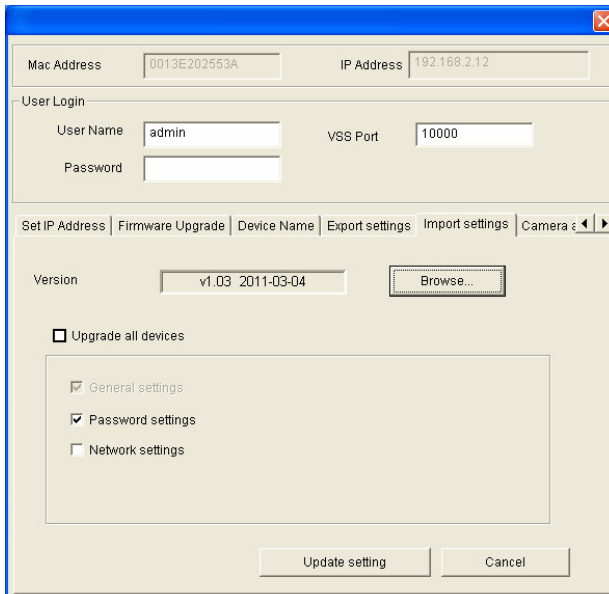

9. Click the **Browse** button to select the backup file saved in Step 5.
10. Type the **Password** and click the **Update Setting** button.