

[FAQ]

How can I access Main System or ViewLog on the second monitor?

Release Date: 10/5/2010

Applied to

GV-System of all versions

Question

I have set up two monitors on the computer of GV-System. How can I access the Main System or the ViewLog on the second monitor?


Answer

To access the Main System (Multicam) or the ViewLog on the second monitor, it is required to run DMPOS, a preinstalled program in GV-System, which can move GeoVision software such as Main System, ViewLog, Remote Playback, EZViewlog, GV-LPR, or Multiview onto a second monitor.


How to do

1. Run **DMPos.exe** in your GV folder. The default location is **C:**. For example, the GV-800 folder is located in **C:\GV-800**.

2. Under the **Screen Setup** tab, select **Twin View** from the Display Mode drop-down list.

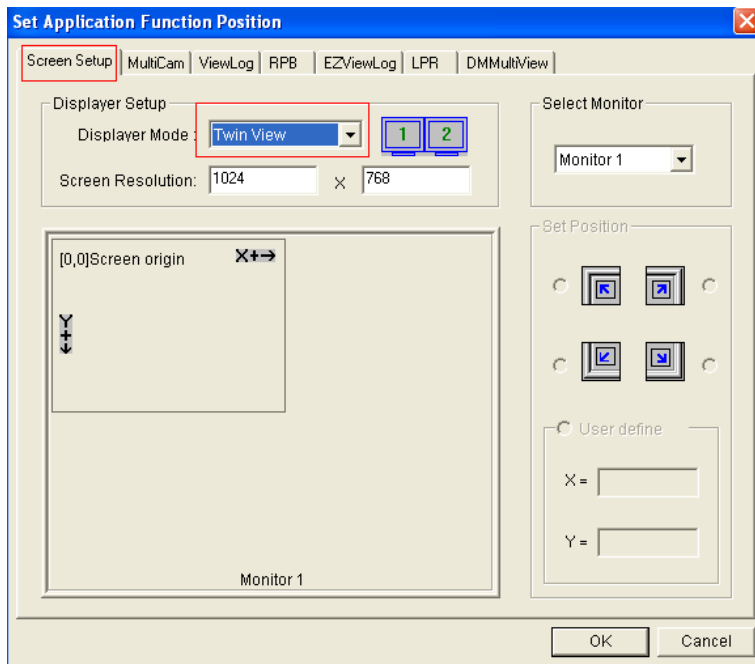

3. Click the desired GeoVision application tab, for which will be moved to the second monitor. In this case, we will use **ViewLog** as the example.
4. Under the **ViewLog** tab, select **Monitor 2** from the drop-down list. Click **OK**.

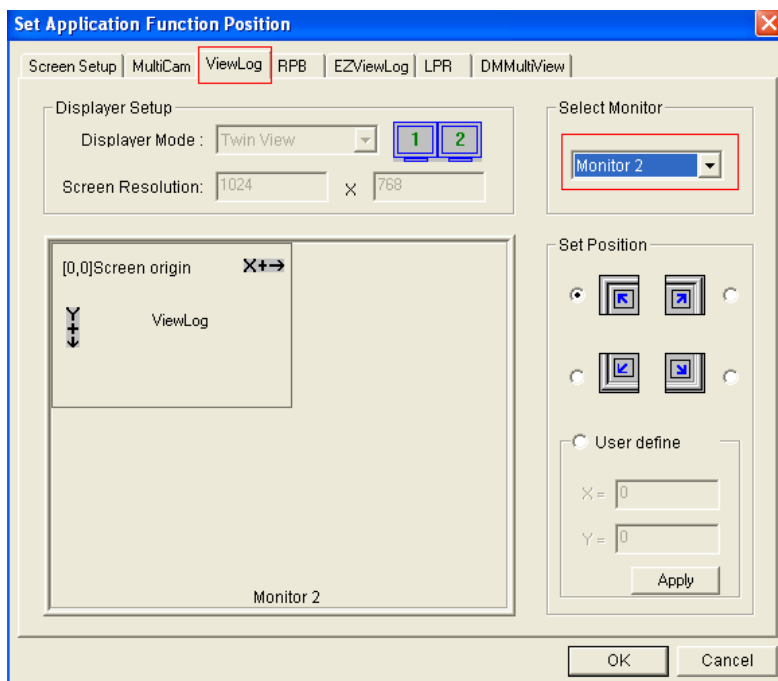

After the settings, you can view the ViewLog on the second Monitor.