

## [FAQ]

### How to Set up Webcam FTP Server?

**Release Date: 04/19/2011**

#### Applied to

GV-System of all versions


#### Question

How to set up FTP server in order to access the recorded images of JPEG format from a remote computer installed with the FTP server?


## How to do

To set up the FTP server, follow the steps below:

1. On the main screen, click the **Network** button, select **WebCam Server**, click the **JPG** tab, and select **Create JPEG/GIF file(s)**.

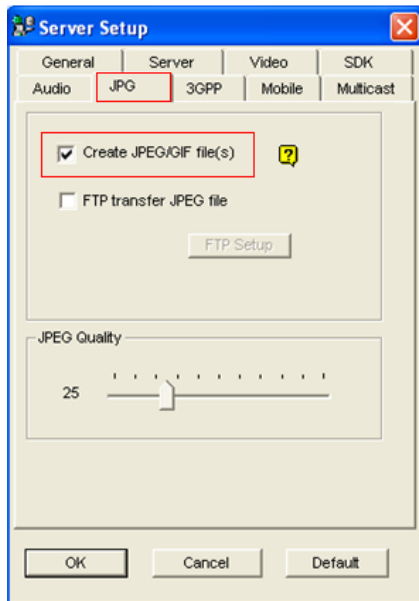

2. Click the **FTP Setup** button, this dialog box appears.

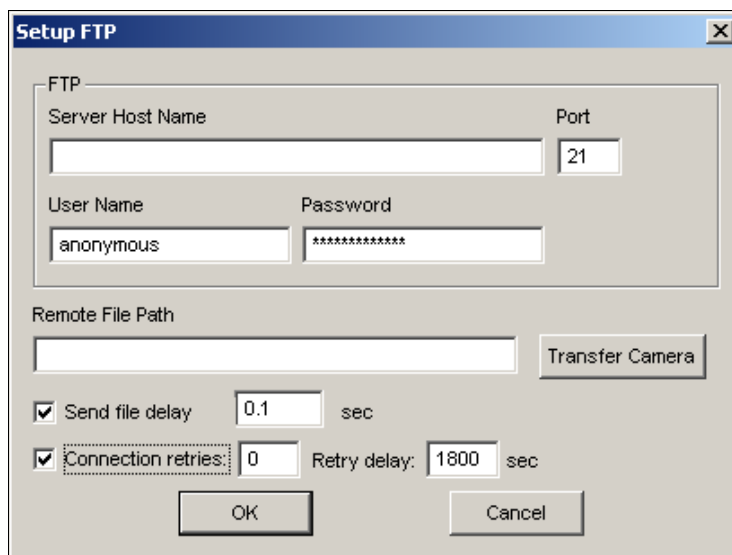

3. In the **Server Host Name** field, type the IP address or domain name of the FTP server. Modify the default port value 21 if necessary.
4. Type a login username and password of the FTP server.
5. Specify a file path to save the recorded images on the FTP server.
6. Click the **Transfer Camera** button and assign which camera's files to be transferred to the FTP server.
7. In the **Send File Delay** field, specify the frequency to upload recorded images from the GV-System to the FTP server. The time range is from 0.1 to 600 seconds.
8. In the **Connection Retries** field, specify the number of retries when the FTP connection fails (Max: 999). In the **Retry Delay** field, specify the interval between each connection retry (Max: 9999 sec.).
9. Click **OK** to apply above settings.