

[FAQ]

How to enable Fisheye dewarping function on WebCam Server, Multi Viewer and Center V2?

Article ID: GV11-12-01-j

Release Date: 12/01/2011

Applied to

GV-System V8.4 or later


Question

How to enable Fisheye dewarping function on WebCam Server, Multi Viewer and Center V2?

How to do

For **WebCam Server** and **Multi Viewer**:

1. On the Main System, click the **Network** button and select **WebCam Server**.
2. Click the **Video** tab. Select **Actual size** from the Max. Image size drop-down list and click **OK**.

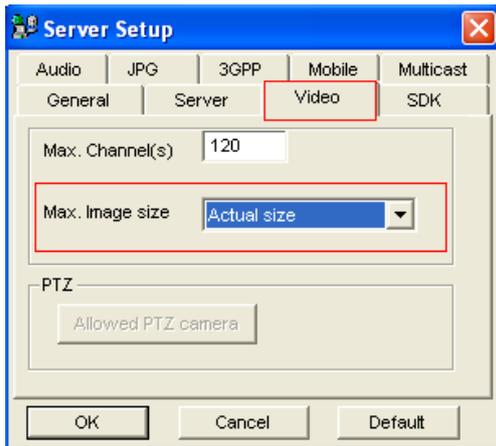

3. To enable Fisheye dewarping function on:

- **WebCam Server**

- A. Click the **Change Quality** button, select **Hardware Streaming H.264** and select the displayed resolution.



B. Right-click on the screen and select **Geo Fisheye**.



- **Multi Viewer**

A. Click the **Quality** button, select a fisheye camera, select **Hardware Streaming H.264** and select the displayed resolution.




B. Right-click on the fisheye live view and select **Geo Fisheye**.




For **Center V2**:

1. Before connecting the GV-System to Center V2, click the **Accounts** button . The Address Book dialog box appears.

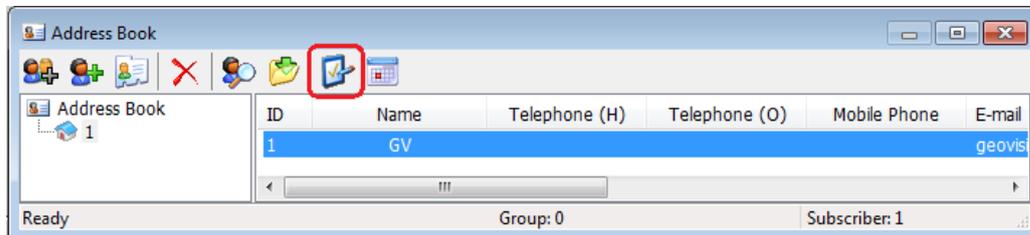

2. Select a subscriber and click the **Subscriber Setting** button. This dialog box appears.

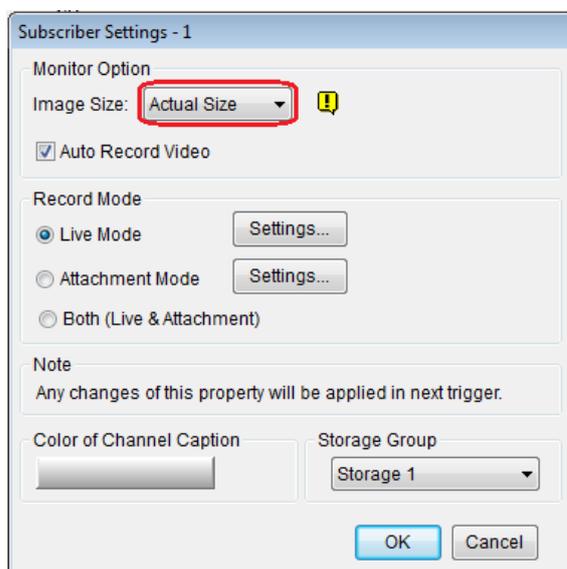

3. Select **Actual Size** from the Image Size drop-down list. Click **OK**.
4. Connect the GV-System to Center V2.
5. Left-click on the fisheye live view to display the live view in single screen.
6. Right-click on the screen and select **Geo Fisheye**.

