

[FAQ]

User can not hear sound from GV-EYE

Release Date: 1/29/2015

Applied to

GV-EYE (v2.1)


Question

User can not hear sound from GV-EYE


Answer

I will use FE camera as an example.

1. Go to Audio Settings

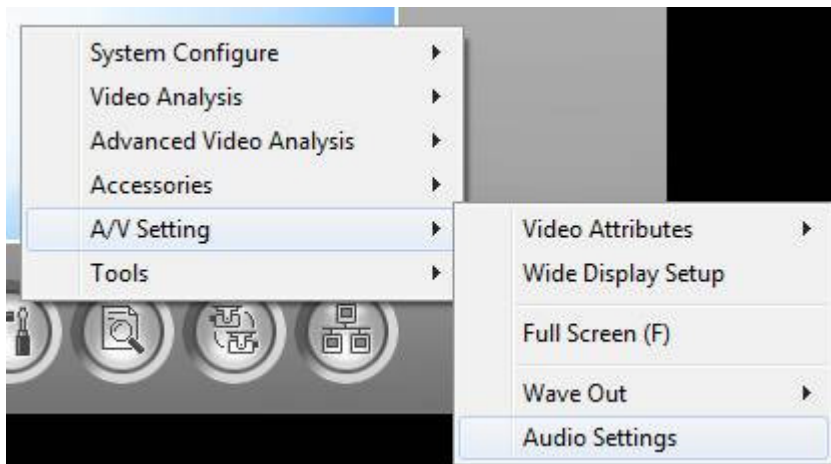


2. Select correct camera audio and enable Wave Out

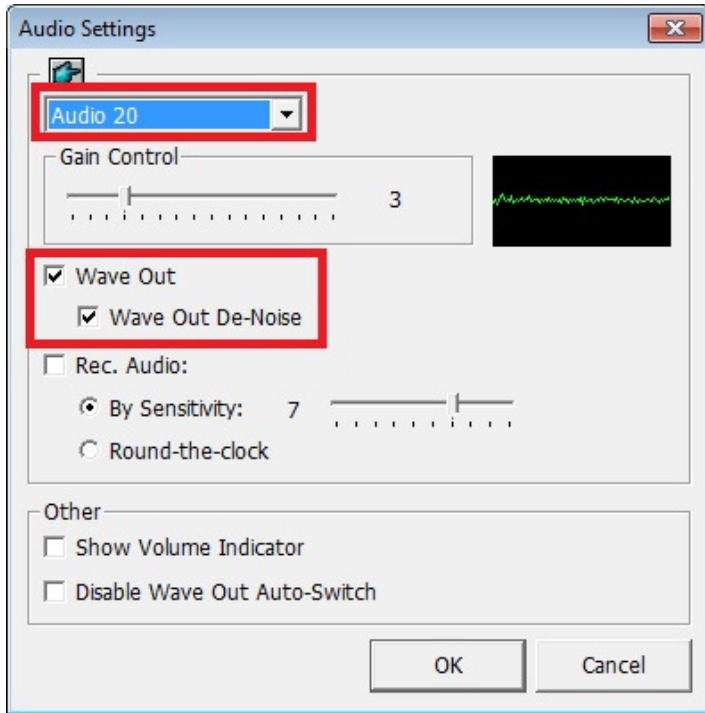

3. On interface of iPhone, touch this audio icon to change this one (speaker with X)



Also, turn on the Ring mode.

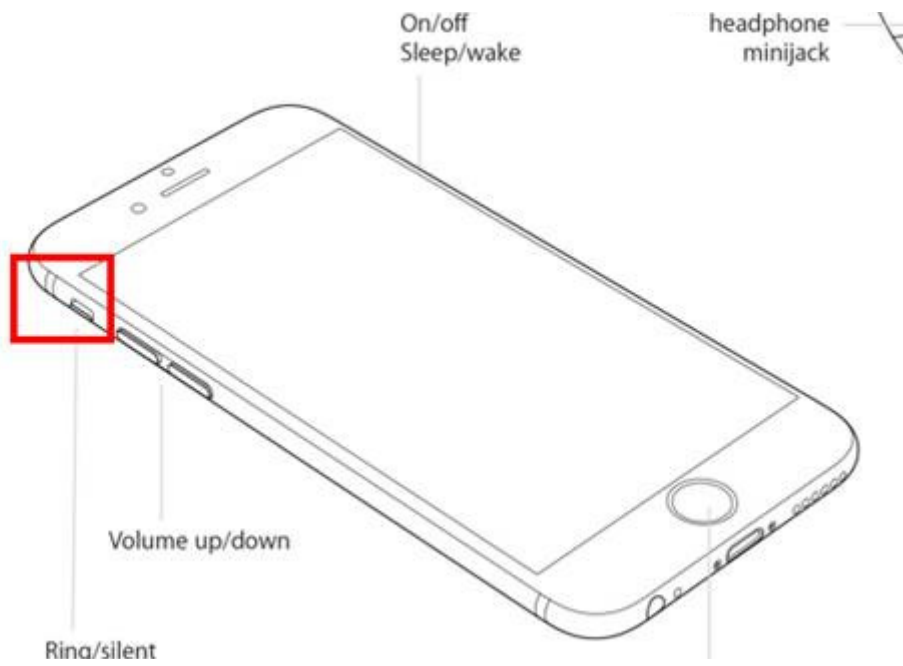

For any question on the information provided, please feel free to submit your question to our support window at support@geovision.com.tw