

[FAQ]

How to disable the recording function of the live view on the Webcam Server?

Release Date: 11/08/2010

Applied to

GV-System V8.0 and later

Question

How to disable the recording function for a specific user when he remotely accesses the live view through the WebCam Server?

Answer


To disable the recording function for a specific user, it is required to log in the GV-System with the Supervisor account, and disable the **File Save** option in the **Password Setup** section.

How to do


To disable the recording function, follow the steps below:

1. Log in the GV-System with the **Supervisor** account.
2. On the Main System, click the **Configure** button, select **General Settings**, select **Password Setup**, and select **Local Account Edit**.

- Click the **User** account whose recording privilege you want to disable.

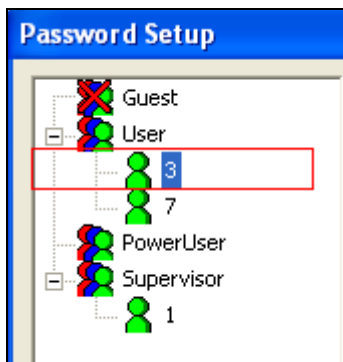

- Under the **Webcam** tab, disable the **File Save** option. Click **OK**.

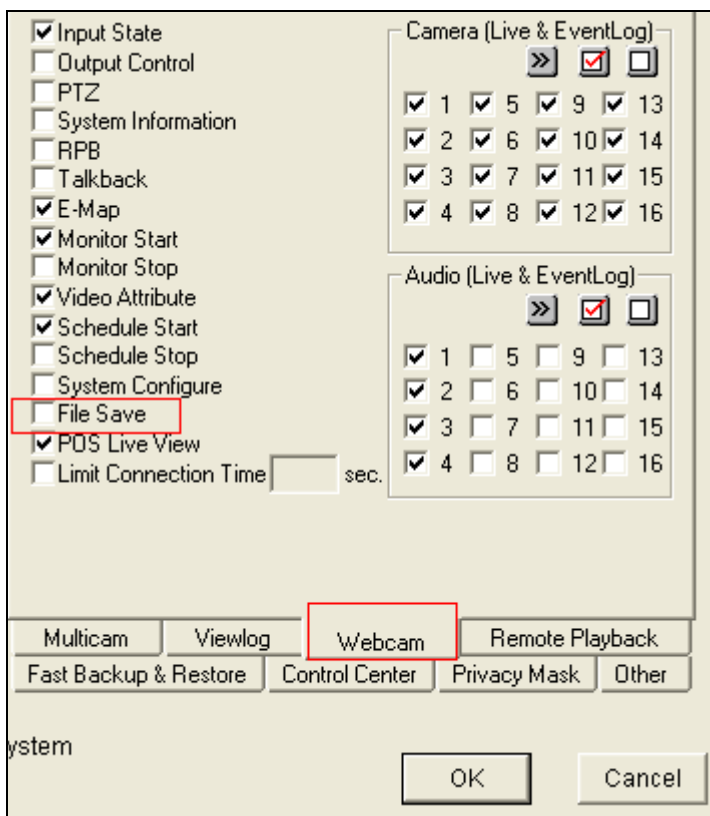

After the settings, this message box would pop up when the configured user account tries to record the live videos through the WebCam Server.

