

[FAQ]

How to apply for free DNS (Domain Name) from GeoVision?

- Go to "Windows / Start / Programs / DDNS/" then run Dynamic DNS. Click 'Register' and the Dynamic DNS register page appears.
- Type a username in the Username field. Username can be up to 16 characters. Username accepts 'a ~ z', '0~9', and '-', but does not accept space or '-' as the first character.
- Type a password in the Password field. The password is case-sensitive and must be at least 6 characters. Re-type the password for confirmation.
- In 'Word Verification', type the code within the box. In this example, the code you should enter is 'im44'. Word verification is not case-sensitive.

DynamicDNS

Register

Username:

Password:

Re-type Password:

Username

You will use the username as the hostname. The username must be no longer than 16 characters in length. You can use a-z, 0-9, and '-'. The username cannot have any spaces nor can it start with a '-'.

Password

The password is case-sensitive.


Enter the word as it is shown in the box below.



Word Verification

This step helps us prevent automated registrations.

- Click the Send button and the system will display the following message if registration complete successfully.

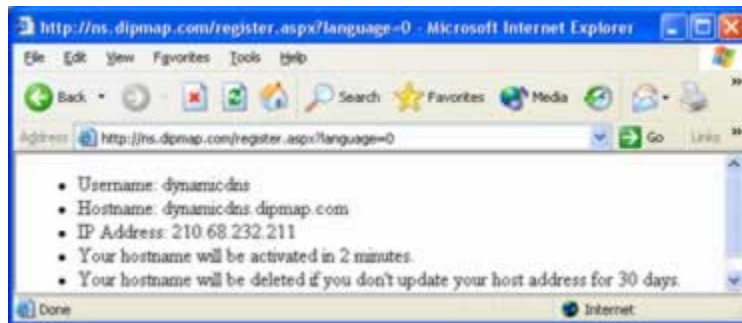

- User may then access the GV server hosted network service using the registered domain name.