

[FAQ]

How to stream RTSP from Video Server

Release Date: 1/29/2015

Applied to

VS11 (FW v1.05), VS12 (FW v1.09), VS14 (FW v1.03)

Question

How to stream RTSP from Video Server

Answer

For RTSP function, main stream should be adjust to specific resolution

For VS11 and VS12, it should be half D1 and CIF

For VS14, it should be D1, half D1 and CIF.

RTSP command for Video Server

If you use the QuickTime player, enter:

rtsp://<IP of the GV-Video Server:8554/<CH No.>.sdp

For example, rtsp://192.168.3.111:8554/CH001.sdp

If you use the VLC, enter:

rtsp://username:password@<IP of the GV-Video Server:8554/<CH No.>.sdp

For example, rtsp://admin:admin@192.168.3.111:8554/CH001.sdp

For any question on the information provided, please feel free to submit your question to our support window at support@geovision.com.tw