



# Default IP Addresses and Login Settings of GeoVision Products

**Article ID: GV3-17-07-07-em**

**Release Date: 07/07/2017**

## Applied to

GeoVision products

## Summary

Here we provide a table listing the default IP, ID, and password of GeoVision products for easy reference. Please see below for the default settings corresponding to your product.

---

**Note:** To avoid an IP conflict, prevent your network devices from using the same default IP while the product is in use.

---

### Default IP, ID, and Password of GeoVision products

Category	Model		Default IP	Default ID/ Password
IP Camera	GV-IP Camera		192.168.0.10	admin/admin
	GV-PPTZ7300	Fisheye	192.168.0.11	
Speed Dome				
Analog Coaxial Device	GV-Compact DVR		192.168.0.10	
	GV-Video Server			
Access Control	GV-AS Controller		192.168.0.100	
	GV-GF Fingerprint Reader		192.168.0.10	
Integration	GV-3D People Counter		192.168.0.100	
	GV-3D People Counter V2		192.168.0.10	



	GV-Data Capture Box	192.168.0.100	
<b>Accessories</b>	GV-IP Decoder Box Plus/GV-Pad/GV-Pad Mini	192.168.0.100	
	GV-IO Box		
	GV-POE Switch	192.168.0.250	
<b>Surveillance System</b>	GV-Hot Swap DVR System V5	192.168.0.200	0000/0000
	GV-Hot Swap NVR/VMS System V5	192.168.0.200 192.168.0.201	
	GV-Hot Swap Recording Server System V5	192.168.0.200 192.168.0.201 192.168.0.202	admin/admin
	GV-Tower DVR/NVR System V2	192.168.0.200 192.168.0.201	0000/0000
	GV-NVR Lite system V2	192.168.0.200	
	GV-Storage System V2	Management Port 192.168.0.199 iSCSI Data port 192.168.1.1 192.168.2.1 192.168.3.1 192.168.4.1 192.168.5.1 192.168.6.1	admin / 0000
	GV-SNVR System	192.168.0.100	admin/admin